

 
DETAIL K
SCALE 1 : 2

200H TUNNEL INSIDE-OUTSIDE




**The window and the out window
supplied connecting.**

Window Sleeve \ Outdoor


Window

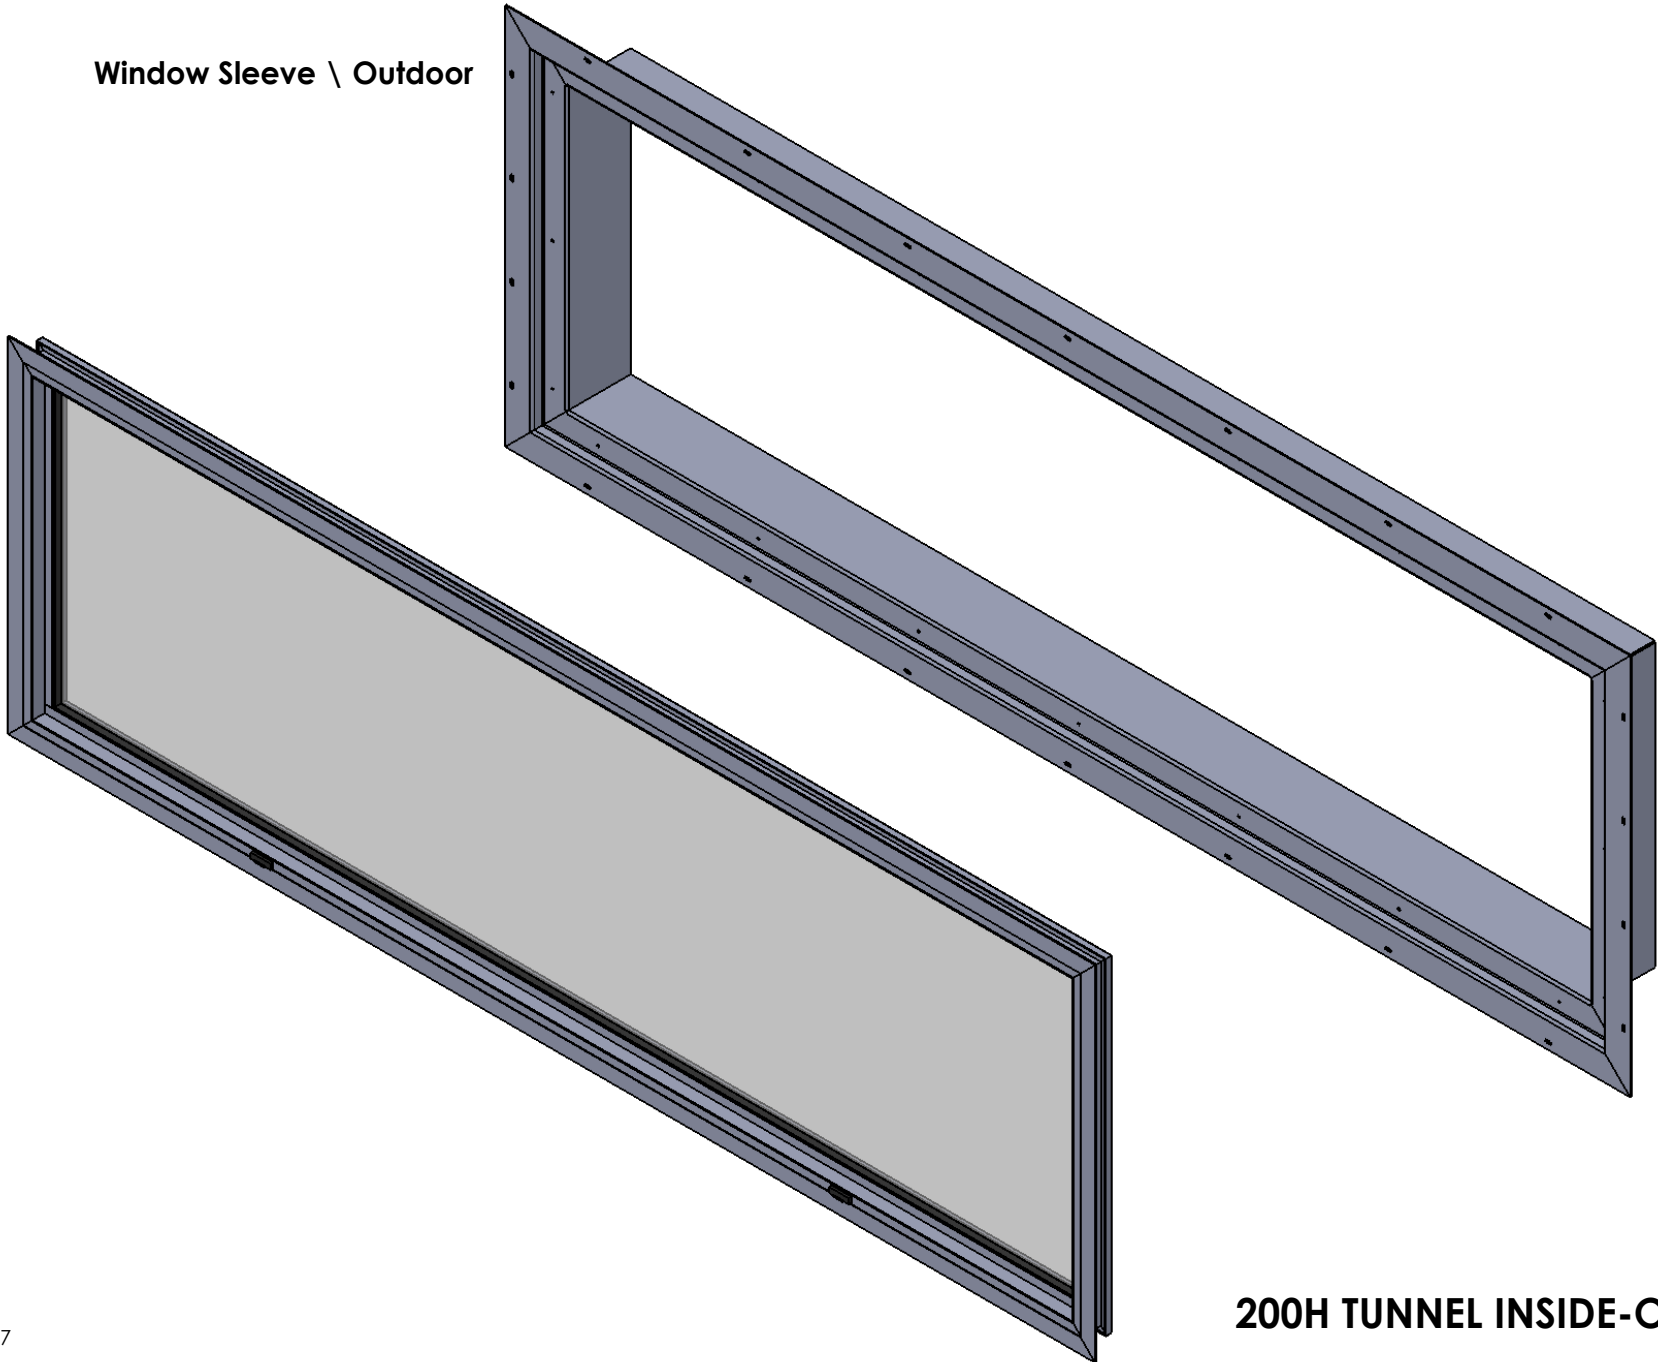

200H TUNNEL INSIDE-OUTSIDE

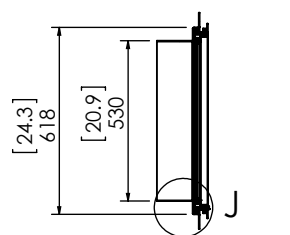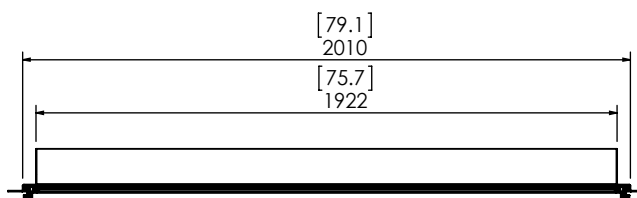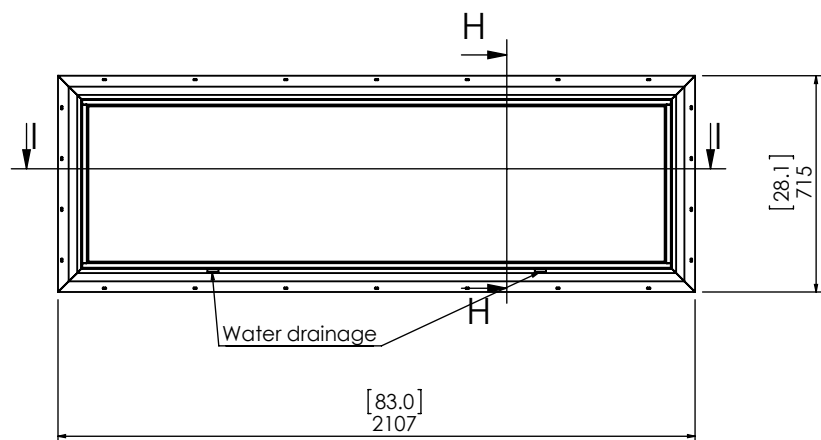   


SECTION H-H

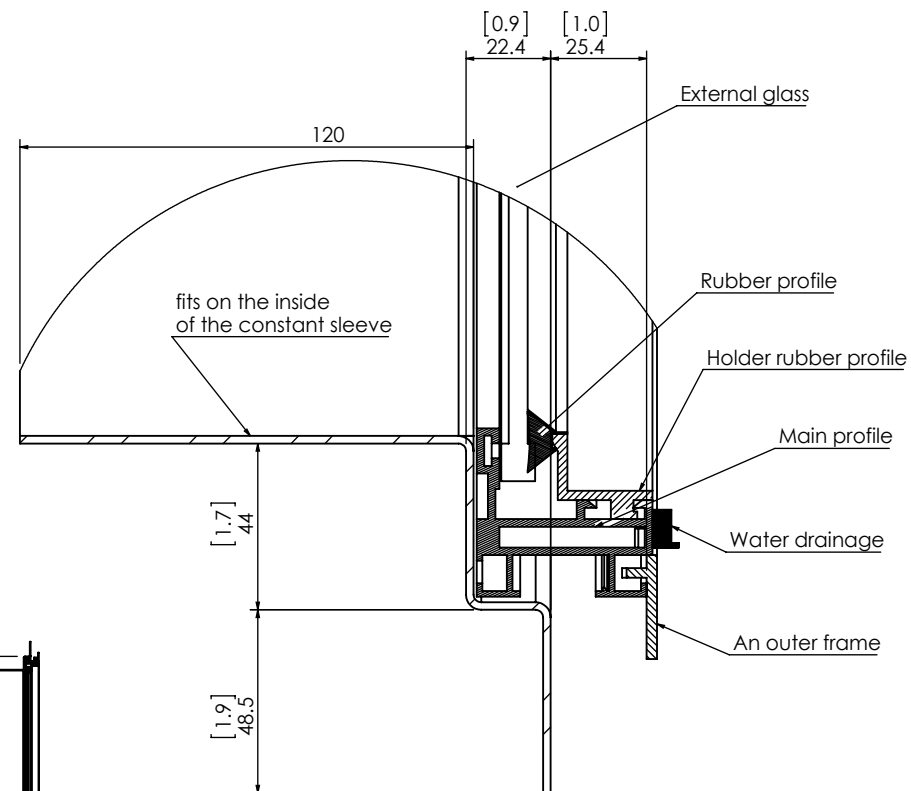 

CLOS

200H TUNNEL INSIDE-OUTSIDE

 Fireplace


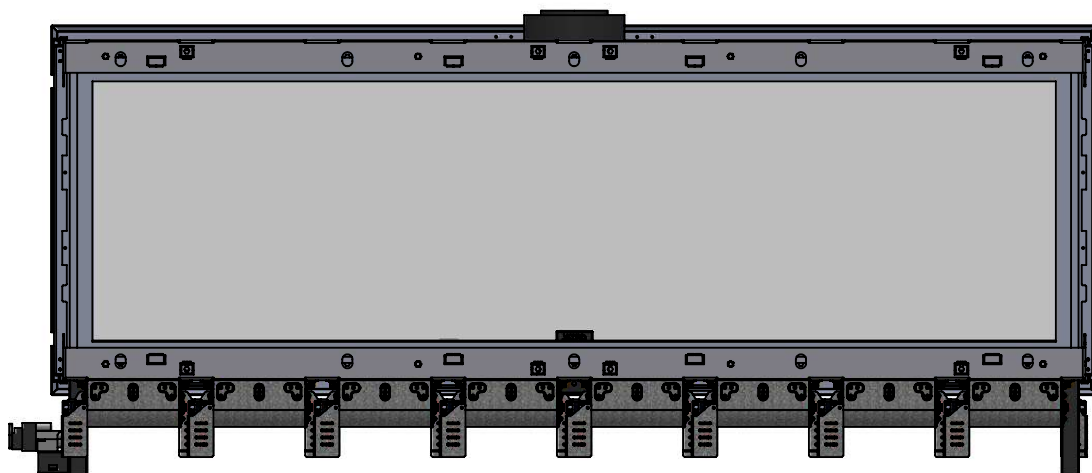


Frame

Inside
house

There is no frame
on the outside

  Outside

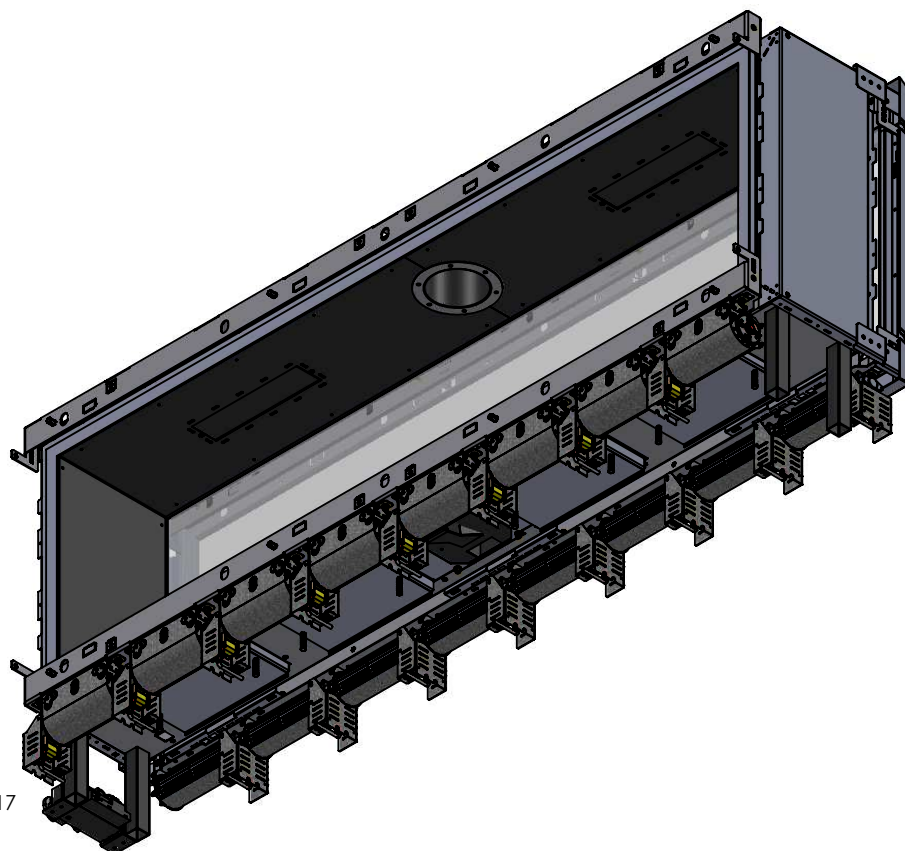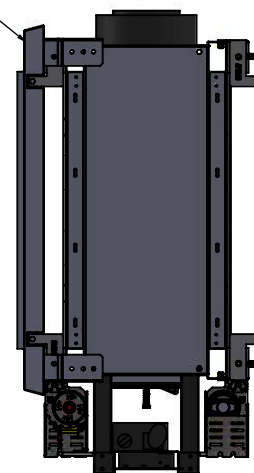


200H TUNNEL INSIDE-OUTSIDE

STEP-1

Connect sleeve to fireplace


Fireplace

 Fireplace Sleeve \ Indoor

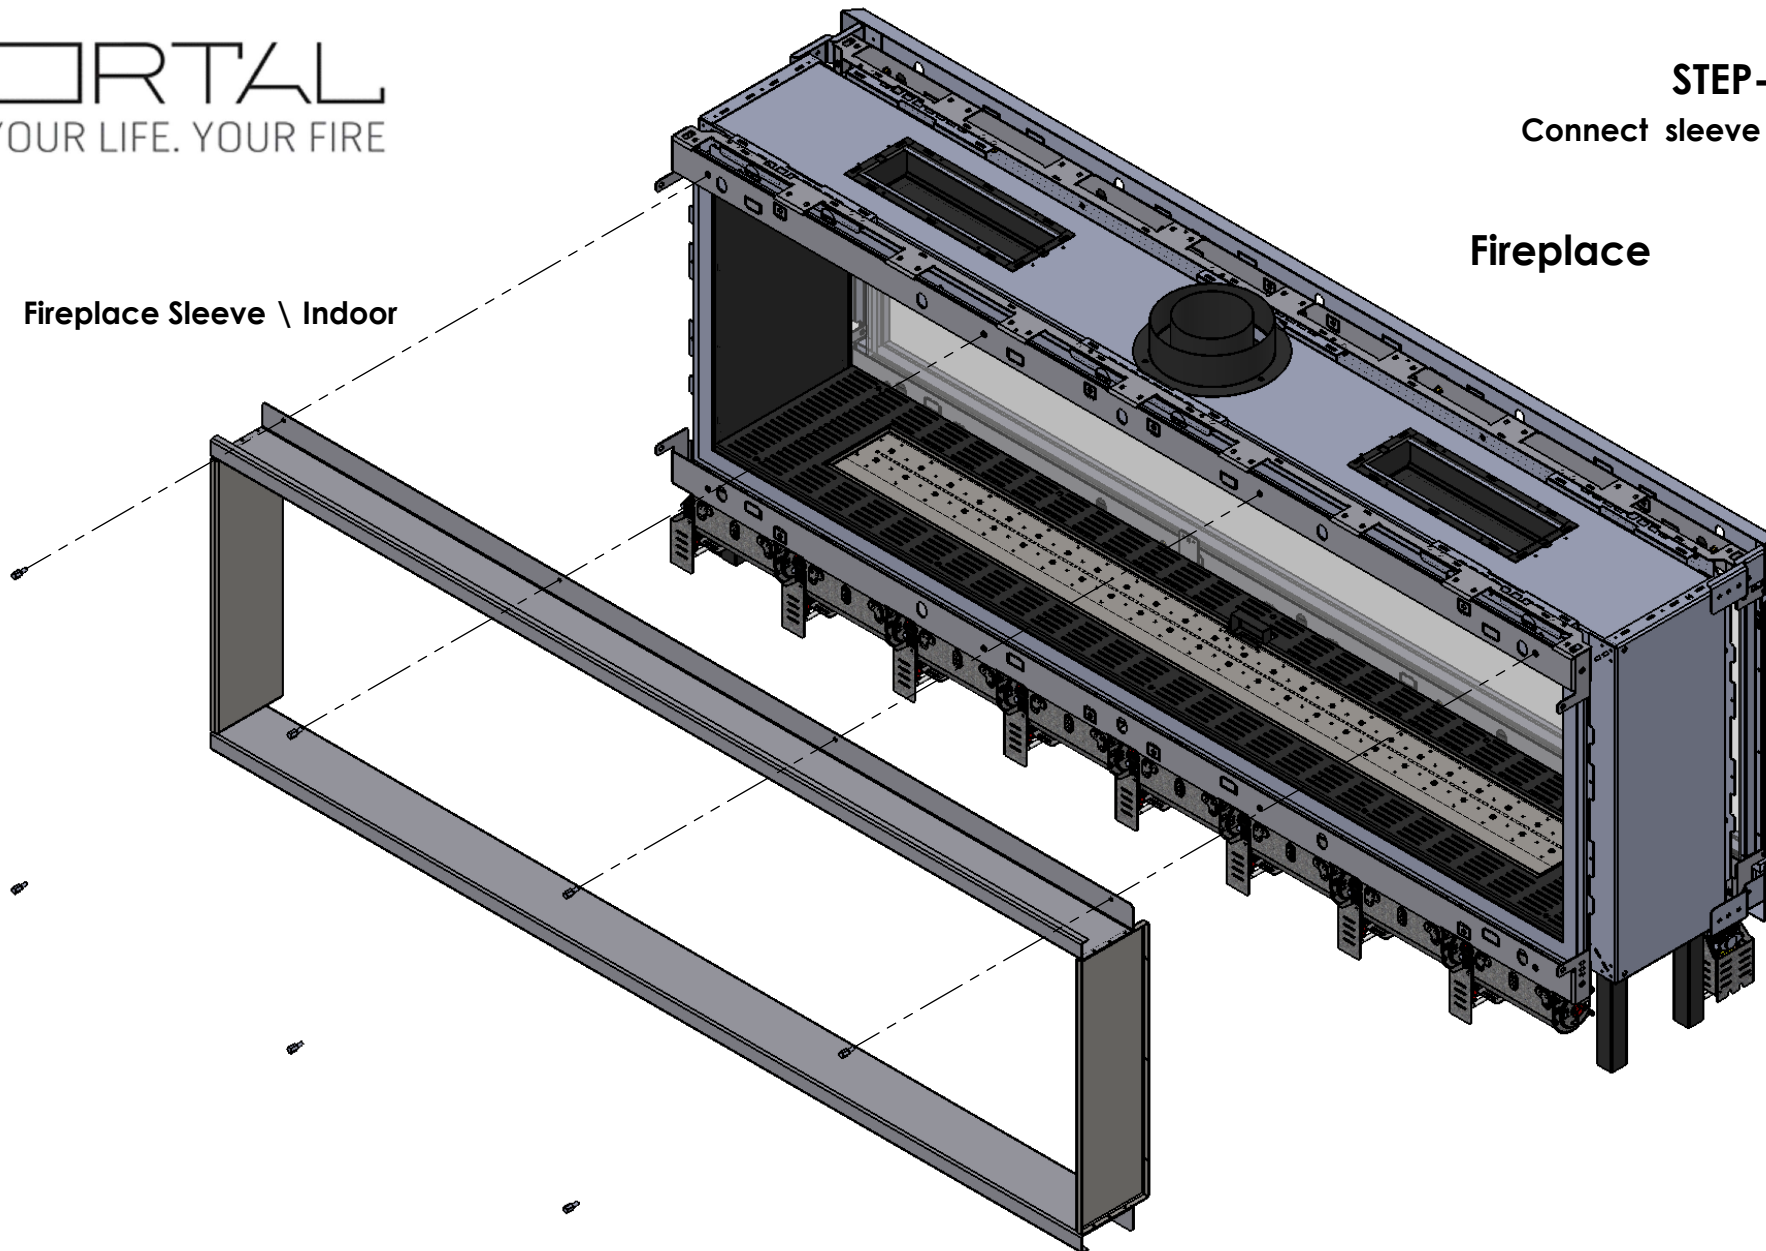

Affix indoor frame to fireplace and connect with screw
(at the place of the rail holder glass)
Before putting the fireplace in the place.

 200H TUNNEL INSIDE-OUTSIDE

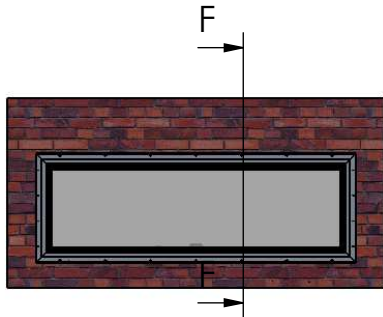


Step 2

Move the fireplace into his place until interior wall is up. Note that leaving 2" . from the outer wall


Step 3

Run chimney pipes,gas,etc. Follow regular installation for double glass models (heat release, aire intake access panel,etc)

 NOTE:
Internal glass of the firebox facing outside is to be removed and serviced through the interior of the firebox. All servicing is to be done from the interior of the home. Do not attempt to open/remove the window mack break the seal and allow rain or other conditions to seep through and affect the firebox.

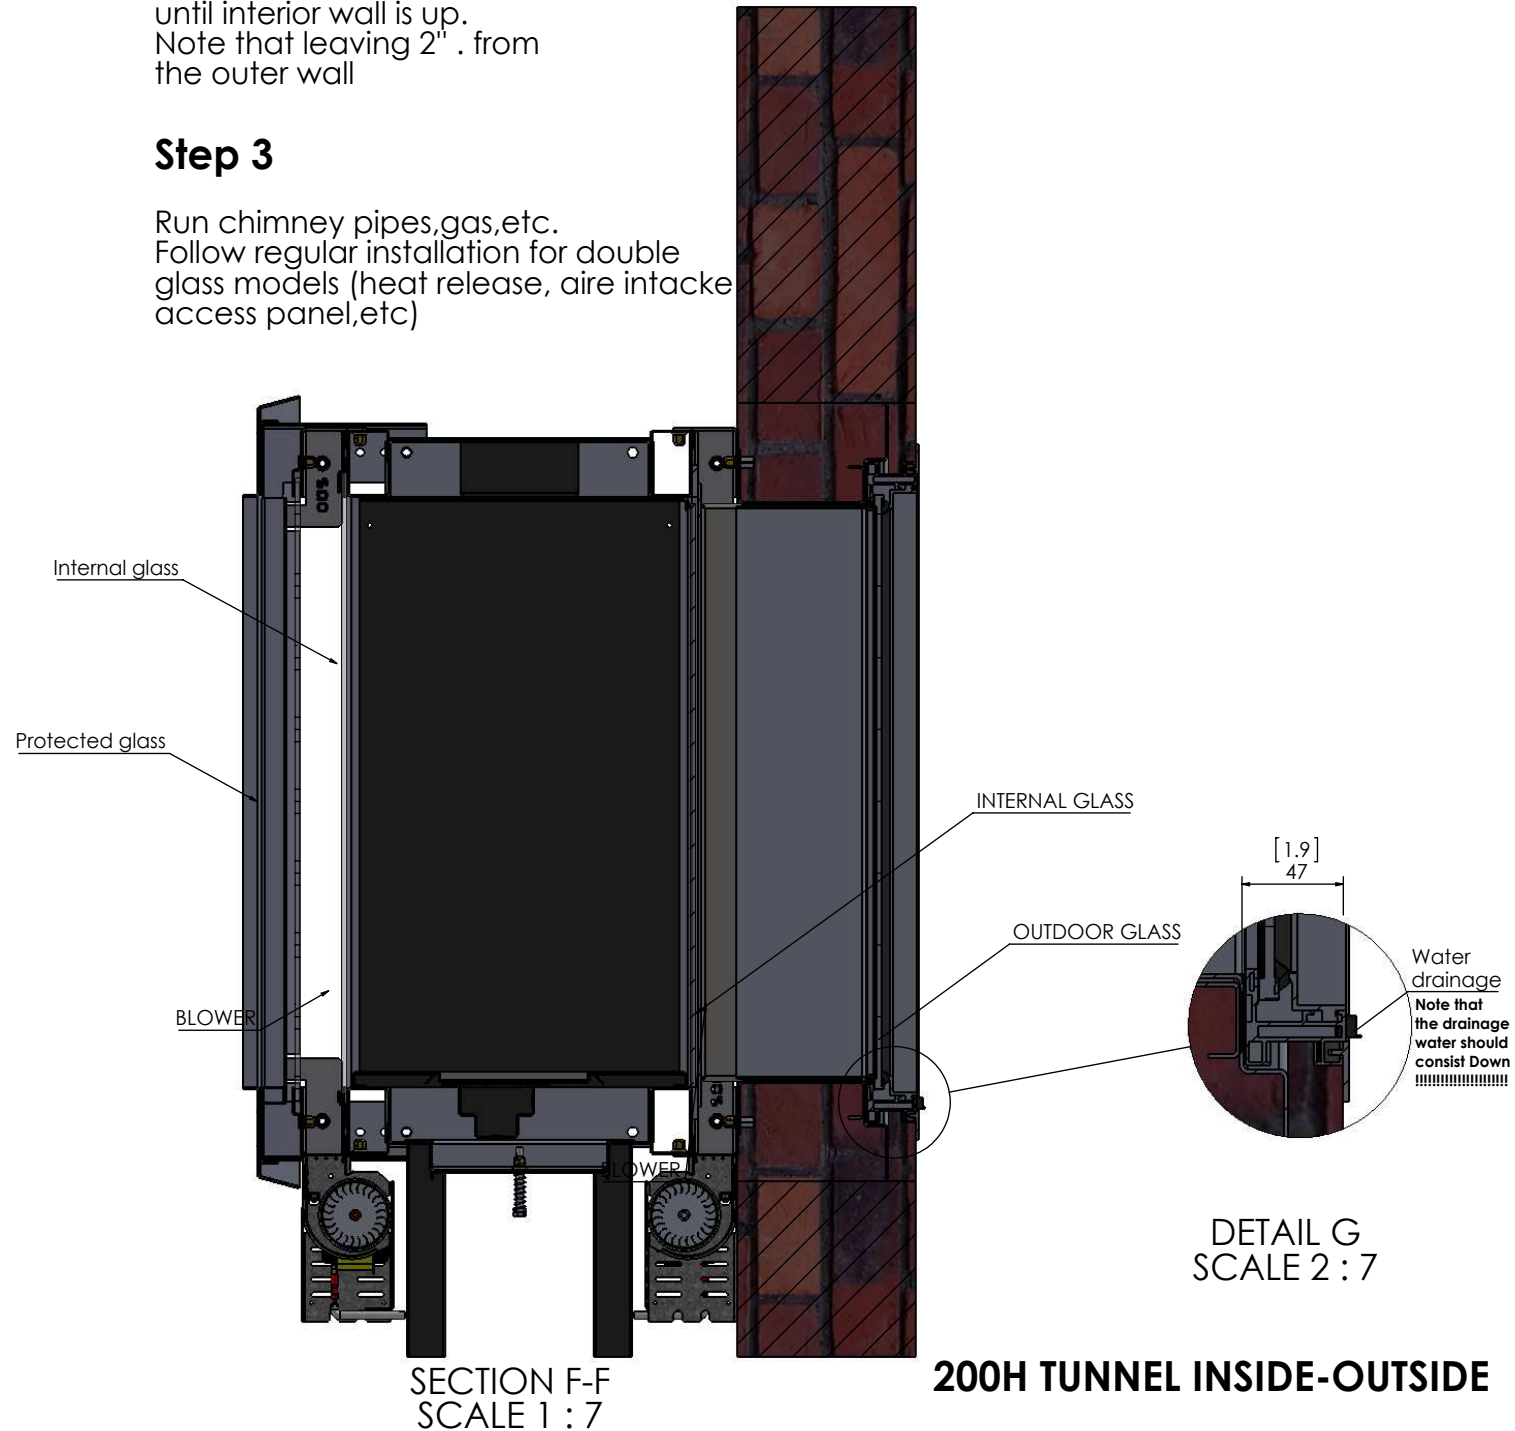

Connect window to wall

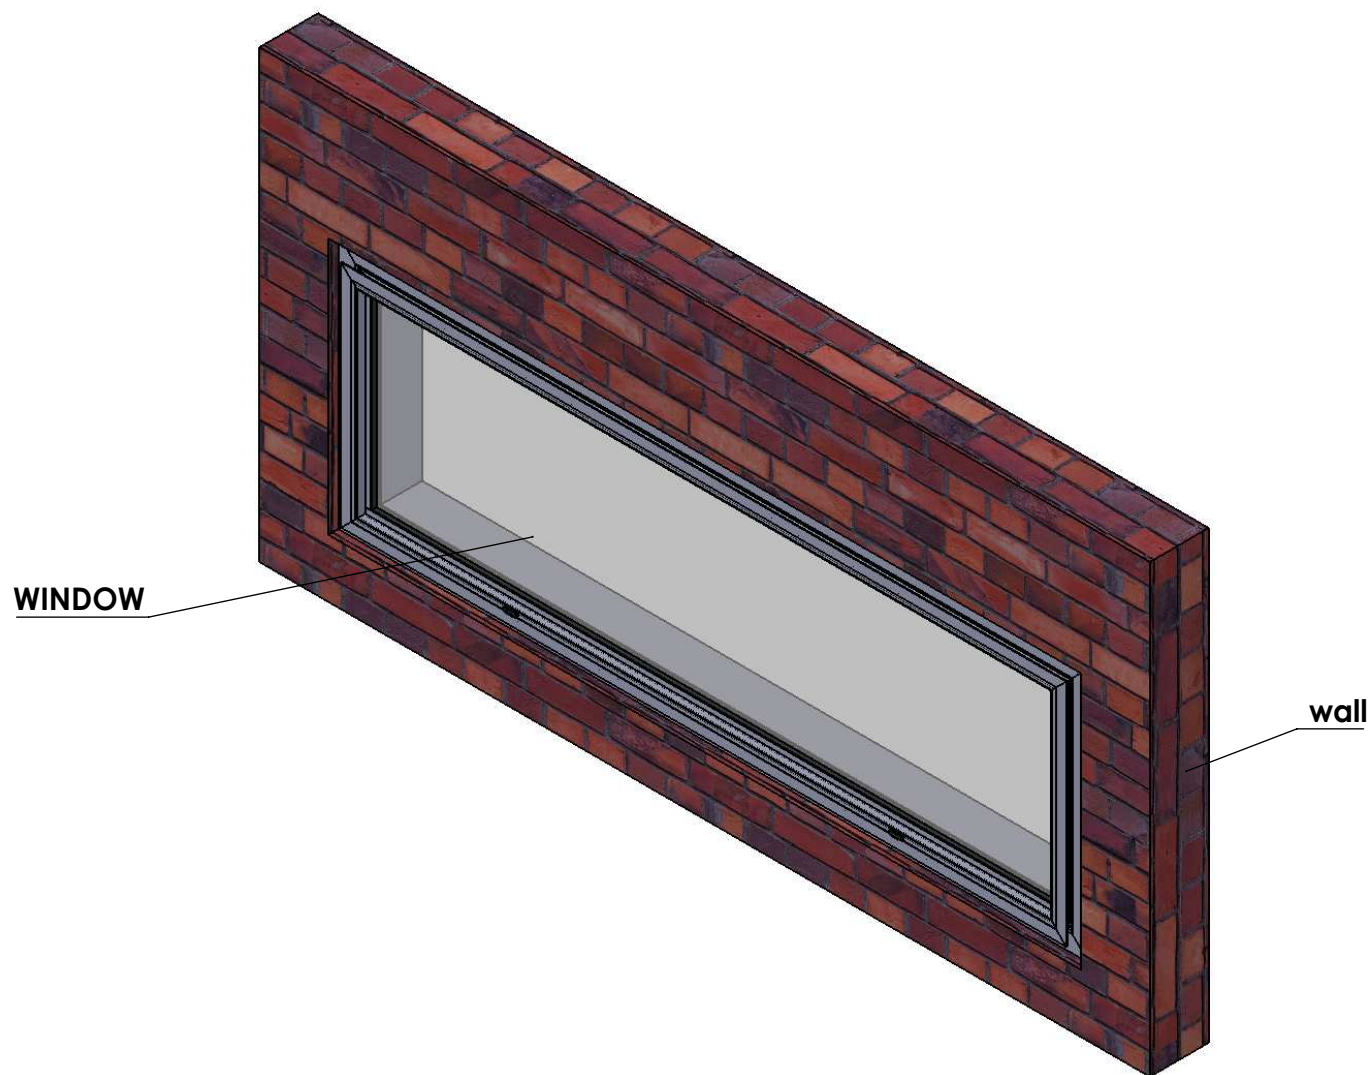 

insert and connect window to wall opening. Make sure to seal window per local code to eliminate water or other elements from leaking into the home. This is to be treated as a typical installation.

12/04/2017

200H TUNNEL INSIDE-OUTSIDE